



VIN

Mileage

■ OK (Checked and OK)
■ CHK (Will need future attention)
■ NOK (Not OK, replacement/repair needed)
■ N/A (Not applicable)

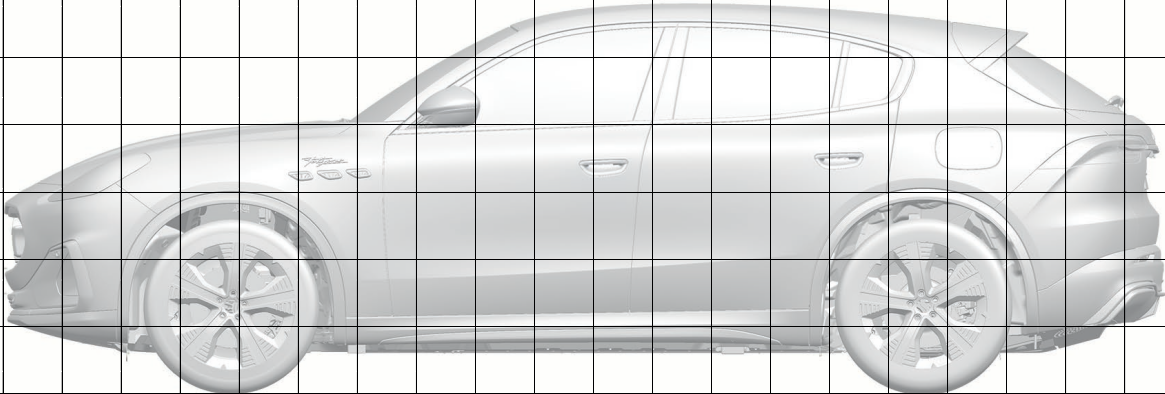
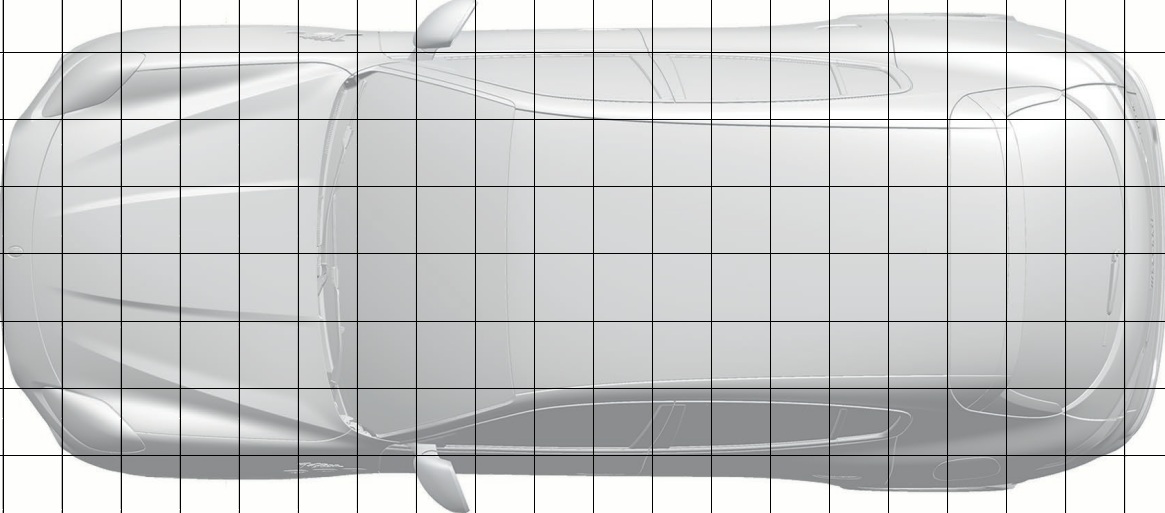
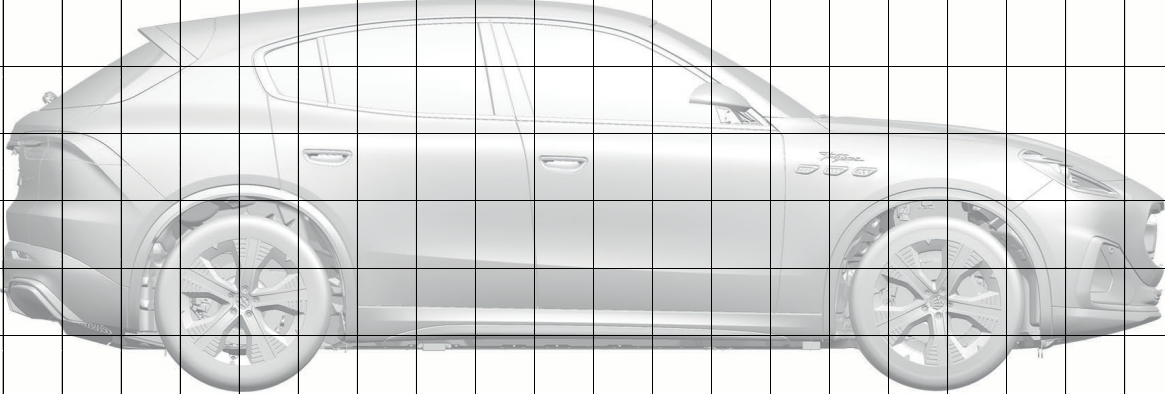
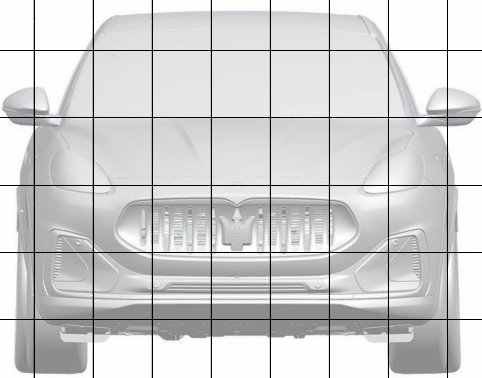
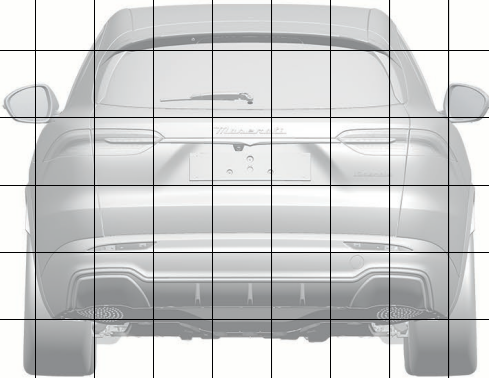
LEGEND

1 PRELIMINARY		OK	CHK	NOK	N/A
1	Integrity full body cover and its removal	☐	☐	☐	☐
2	Logistic mode removal. At the end of the operation, disconnect the diagnostics tool and turn the vehicle key to OFF.	☐	☐	☐	☐
3	Car wash (if necessary) - NOTE: Hand washing with neutral product recommended	☐	☐	☐	☐
4	Car integrity for transport damage	☐	☐	☐	☐
5	Control data corresponding homologation car (chassis, labels, markings, etc.)	☐	☐	☐	☐
6	Car conformity vs order	☐	☐	☐	☐
7	Campaigns (recall/service) pending	☐	☐	☐	☐
8	MOT / Mandatory vehicle inspection (expiry date)	☐	☐	☐	☐
9	Vehicle tools kit & others on board equipment (license plate holder/bags/carpet/Fix&Go ...)	☐	☐	☐	☐
2 INTERIOR					
2.1 Driver's position					
1	Warning light(s) ON (ESC, Airbag, WRENCH,...)	☐	☐	☐	☐
2	Check that the indicator light on the instrument cluster "Ride height" is steady on. If this light is blinking, close all the doors and start the engine; then wait until the pneumatic suspension system is initialized (this phase could take up to 180 seconds: do not turn off the engine and do not open the doors until the indicator light will stay on).	☐	☐	☐	☐
3	Stored messages on-board computer	☐	☐	☐	☐
4	Instrument cluster operation (gauges, warning lamps, lighting and dimming)	☐	☐	☐	☐
5	Windshield wipers and washers: control stalk operation	☐	☐	☐	☐
6	Electric parking brake functionality	☐	☐	☐	☐
7	Horn functionality (all areas of pad)	☐	☐	☐	☐
8	Power windows and lock switch	☐	☐	☐	☐
9	Interior mirrors electrochromic dimming (test with flashlight)	☐	☐	☐	☐
10	Exterior mirrors electrochromic dimming (test with flashlight)	☐	☐	☐	☐
11	Driver's seat power movements and controls	☐	☐	☐	☐
12	Steering column movement (tilt, stroke)	☐	☐	☐	☐
13	Heated steering wheel (temperature adjustment functions, if present)	☐	☐	☐	☐
14	Side mirrors functionality (controls and heating)	☐	☐	☐	☐
15	HVAC controls/vents front and rear (functionality)	☐	☐	☐	☐
16	Glove box lid and light	☐	☐	☐	☐
17	Front ceiling courtesy light	☐	☐	☐	☐
18	Accessory power socket / cigar lighter	☐	☐	☐	☐
19	Sunroof and sunshade operation (if present)	☐	☐	☐	☐
20	Luggage compartment lid opening (with switch)	☐	☐	☐	☐
21	Radio/USB: date and time setting, audio quality, radio reception, display visibility and functionality	☐	☐	☐	☐
22	Multimedia controls: knobs and steering wheel commands	☐	☐	☐	☐
23	Test call with Bluetooth-connected mobile phone	☐	☐	☐	☐
24	Navigation system mapping updated	☐	☐	☐	☐
25	Wireless charger functionality (if present)	☐	☐	☐	☐
26	Owner's documentation	☐	☐	☐	☐
27	Check Carplay/Android Auto operation both via Cable and Wireless	☐	☐	☐	☐
28	Removal of all not necessary adhesives (e.g. on door panel under the armrest, on side glasses, on sunshades...)	☐	☐	☐	☐
29	Ambient light functionality	☐	☐	☐	☐
2.2 Left front					
1	Left front seat belt/height adjuster (sliding/return/insert)	☐	☐	☐	☐
2	Door button opening/closing functionality (with door lock ON/OFF). Check door opening from the outside with mechanical key and Smart key and from the internal with e-Latch and mechanical unlocking.	☐	☐	☐	☐

3	Door opening/closing noise or difficulties (with window up/down)	☐	☐	☐	☐
4	Left front seat heater (if present)	☐	☐	☐	☐
5	Left front seat ventilation (if present)	☐	☐	☐	☐
6	Door courtesy light	☐	☐	☐	☐
7	Left front sun visor	☐	☐	☐	☐
8	Left front power window	☐	☐	☐	☐
9	"Easy Entry" seat back tilt	☐	☐	☐	☐
10	Check the functioning of the vanity light on the sun visor	☐	☐	☐	☐
2.3 Left rear					
1	Left rear seat belt (sliding/return/insert)	☐	☐	☐	☐
2	Door button opening/closing functionality (with door lock ON/OFF). Check door opening from the outside with Smart key, and from the internal with e-Latch	☐	☐	☐	☐
3	Door opening/closing noise or difficulties (with window up/down)	☐	☐	☐	☐
4	Child lock	☐	☐	☐	☐
5	Left rear seat heater (if present)	☐	☐	☐	☐
6	Door courtesy light	☐	☐	☐	☐
7	Left rear power window	☐	☐	☐	☐
8	Left rear HVAC controls/vents	☐	☐	☐	☐
9	USB power sockets	☐	☐	☐	☐
10	Rear seat folding	☐	☐	☐	☐
2.4 Luggage compartment					
1	Luggage compartment opening and closing (with keyfobs, exterior and interior buttons and hands-free sensor)	☐	☐	☐	☐
2	Luggage compartment hinges, alignment and struts	☐	☐	☐	☐
3	Emergency equipment: reflective jacket, warning triangle, first aid kit (check expiry date)	☐	☐	☐	☐
4	Luggage compartment light	☐	☐	☐	☐
5	Tyre repair kit (presence, condition, expiry date)	☐	☐	☐	☐
6	Spare wheel (if present): condition, correct tyre pressure	☐	☐	☐	☐
7	Emergency tool kit (completeness)	☐	☐	☐	☐
8	Charging cables and accessories (presence, condition)	☐	☐	☐	☐
9	12V power socket	☐	☐	☐	☐
10	Charge Cable Emergency Unlock	☐	☐	☐	☐
2.5 Right rear					
1	Right rear seat belt (sliding/return/insert)	☐	☐	☐	☐
2	Door button opening/closing functionality (with door lock ON/OFF). Check door opening from the outside with Smart key, and from the internal with e-Latch	☐	☐	☐	☐
3	Door opening/closing noise or difficulties (with window up/down)	☐	☐	☐	☐
4	Child lock	☐	☐	☐	☐
5	Right rear seat heater (if present)	☐	☐	☐	☐
6	Door courtesy light	☐	☐	☐	☐
7	Right rear power window	☐	☐	☐	☐
8	Right rear HVAC controls/vents	☐	☐	☐	☐
9	USB socket	☐	☐	☐	☐
10	Rear seat folding	☐	☐	☐	☐
11	Dome lights	☐	☐	☐	☐
12	Central rear safety belt (sliding/return/insert)	☐	☐	☐	☐
2.6 Right front					
1	Right front seat belt/height adjuster (sliding/return/insert)	☐	☐	☐	☐
2	Door button opening/closing functionality (with door lock ON/OFF). Check door opening from the outside with Smart key, and from the internal with e-Latch	☐	☐	☐	☐
3	Door opening/closing noise or difficulties (with window up/down)	☐	☐	☐	☐
4	Power seat controls and movement	☐	☐	☐	☐
5	Right front seat heater (if present)	☐	☐	☐	☐

6	Right front seat ventilation (if present)	☐	☐	☐	☐
7	Door courtesy light	☐	☐	☐	☐
8	Right front sun visor	☐	☐	☐	☐
9	Check the functioning of the vanity light on the sun visor	☐	☐	☐	☐
3 EXTERIOR					
3.0 Exterior walkaround and security check					
1	All doors lock properly with keyfob	☐	☐	☐	☐
2	All doors unlock and open properly with keyfob	☐	☐	☐	☐
3	Check door opening/closure by proximity (keyless)	☐	☐	☐	☐
4	Anti theft alarm system (functionality)	☐	☐	☐	☐
5	Body, paintwork and glass damage	☐	☐	☐	☐
6	Panels alignment	☐	☐	☐	☐
7	Headlights: high and low beam, position/DRL, turn indicator and side marker lights	☐	☐	☐	☐
8	Side turn indicator lights	☐	☐	☐	☐
9	Taillights: position, brake (side and central), reverse, turn indicator, and fog lights	☐	☐	☐	☐
10	Side vents lighting	☐	☐	☐	☐
3.1 Front exterior					
1	Front headlight lens condition	☐	☐	☐	☐
2	Front bumper, grille and trident emblem (fixing, alignment, damages)	☐	☐	☐	☐
3	Windscreen glass	☐	☐	☐	☐
4	Windscreen wiper blades	☐	☐	☐	☐
5	Towbar: check presence, installation, safety key and front bumper cover	☐	☐	☐	☐
3.2 Left front exterior					
1	Door lock cylinder functionality	☐	☐	☐	☐
2	Keyless entry functionality: door unlock/lock (see user manual)	☐	☐	☐	☐
3	Left front side mirror housing and glass	☐	☐	☐	☐
4	Left front door hinge and alignment	☐	☐	☐	☐
5	Left front door seals	☐	☐	☐	☐
3.3 Left rear exterior					
1	Left rear door hinge and alignment	☐	☐	☐	☐
2	Left rear door seals	☐	☐	☐	☐
3.4 Rear exterior					
1	Rear window wiper blade	☐	☐	☐	☐
2	Rear bumper fascia (fixing, alignment, damages)	☐	☐	☐	☐
3	Towing hook: presence, mounting, security key, bumper hatch cover	☐	☐	☐	☐
4	Charge door correctly locking and unlocking	☐	☐	☐	☐
3.5 Right rear exterior					
1	Right rear door hinge and alignment	☐	☐	☐	☐
2	Right rear door seals	☐	☐	☐	☐
3.6 Right front exterior					
1	Keyless entry functionality: door unlock/lock (see user manual)	☐	☐	☐	☐
2	Right front side mirror housing and glass	☐	☐	☐	☐
3	Right front door hinge and alignment	☐	☐	☐	☐
4	Right front door seals	☐	☐	☐	☐
3.7 Top exterior					
1	Sunroof glass and seals (test for leaks) (if present)	☐	☐	☐	☐
3.8 Wheels and tyres					
1	Tyres: correct size and specification	☐	☐	☐	☐
2	Rims	☐	☐	☐	☐
3	Pressure (measure with gauge)	☐	☐	☐	☐
4	Bolts tightening (with dynamometric wrench)	☐	☐	☐	☐
4 ENGINE COMPARTMENT					
1	Engine cover/insulation (integrity, fixing)	☐	☐	☐	☐
2	Lid latch release mechanism and secondary or safety catch	☐	☐	☐	☐
3	Windscreen washer fluid level and reservoir cap	☐	☐	☐	☐
4	Engine coolant circuit(s): fluid level, reservoir and cap integrity	☐	☐	☐	☐
5	Brake fluid level, reservoir and cap check	☐	☐	☐	☐
6	12V battery: secure attachment, correct type, no visible damage	☐	☐	☐	☐
7	General inspection of all electrical components and visible HV components (no leaks and damage)	☐	☐	☐	☐
5 UNDER THE VEHICLE					
5.1 Under body					
1	Steering arms, rack and boots: integrity and leak check	☐	☐	☐	☐
2	Rear suspension: check that the spacers on the shock absorbers have been removed; otherwise remove them - Ref. Norm SCM IQM00165	☐	☐	☐	☐
3	Bottom of front and rear bumpers (visual damage)	☐	☐	☐	☐
4	Side sills (fixing, condition)	☐	☐	☐	☐
5	Visual inspection of all exposed electrical components and connections	☐	☐	☐	☐
6	Visible leaks	☐	☐	☐	☐
5.2 Transmission/Transaxle/Differential					
1	Visible leaks	☐	☐	☐	☐
5.3 Brakes					
1	Brake calipers, hoses, lines and fittings: inspect for cracks and leaks	☐	☐	☐	☐
6 OVERALL FUNCTIONAL ROAD TEST					
6.1 Engine and drivetrain					
1	Idle drive	☐	☐	☐	☐
2	AWD disconnect function (if present)	☐	☐	☐	☐
3	Drive modes [MAX RANGE-GT-SPORT-OFF ROAD]	☐	☐	☐	☐
4	eCoasting (Level Paddles: D-- / D- / D / D+) and eBraking system functionality	☐	☐	☐	☐
6.2 Braking					
1	Parking brake (proper operation)	☐	☐	☐	☐
6.3 Overall driveability and functionality					
1	Steering behaviour (tracking, pulling, play in the steering system)	☐	☐	☐	☐
2	Steering wheel (return, central position alignment, free play, symmetry in turning circle)	☐	☐	☐	☐
3	Overall vehicle ride quality (noise, vibration)	☐	☐	☐	☐
4	Activation of Voice Assistante through the head unit: from the menu "Settings" of "Vehicle" page, check that the function "Voice" is checked.	☐	☐	☐	☐
5	AVAS and BEV sound system functionality	☐	☐	☐	☐
6	SAT/NAVI functionality	☐	☐	☐	☐
7	HVAC operating performance (selecting COLD - HOT)	☐	☐	☐	☐
8	Rear/surround view system (test and lens cleaning)	☐	☐	☐	☐
9	Parking sensors operation (front and rear, both sides)	☐	☐	☐	☐
10	Rear view camera/360° view camera (check functionality)	☐	☐	☐	☐
11	Air suspension: all levels available, from Park to Off road 2 (except Aero 2, not available in static)	☐	☐	☐	☐
6.4 After road test					
1	Visible leaks	☐	☐	☐	☐
2	Check warning lamps and stored messages	☐	☐	☐	☐
3	Check for error codes using MD tester	☐	☐	☐	☐
7 OTHER CHECKS					
1	Trunk for factory supplied items (floor mats, extra key, hub caps, plate brackets)	☐	☐	☐	☐
2	TBM connection unlocked - refer to Workshop procedure n. 08.71.224 35 (Connection check)	☐	☐	☐	☐
3	Maserati Connect customer enrolled - ref. Network Development/Operating Guidelines/Enrollment Process on ModisCS+ and Operating Requirements on Dealer Intelligence	☐	☐	☐	☐
4	Check of correct fitting of front and rear number plate holder	☐	☐	☐	☐
5	Check of HV battery state of charge and top-up, if necessary	☐	☐	☐	☐
6	ONLY FOR GB market: Homologation label application - ref. Bulletin MAS004685	☐	☐	☐	☐

8. FAULT LOCATION

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
A																							
B																							
C																							
D																							
E																							
F																							
G																							
H																							
I																							
J																							
K																							
L																							
M																							
N																							
O																							
P																							
Q																							
R																							
S																							
T																							
U																							
V																							
W																							
X																							
Y																							
Z																							

Insert coordinates, suspected component (if identified)

Insert coordinates, suspected component (if identified)

[illegible]

Dealership stamp	Inspection performed by (Name/Surname)	
	Inspection date (MM/DD/YYYY)	Signature